

Tool model
Tool Status

BT1855-E
active

BOSTITCH®

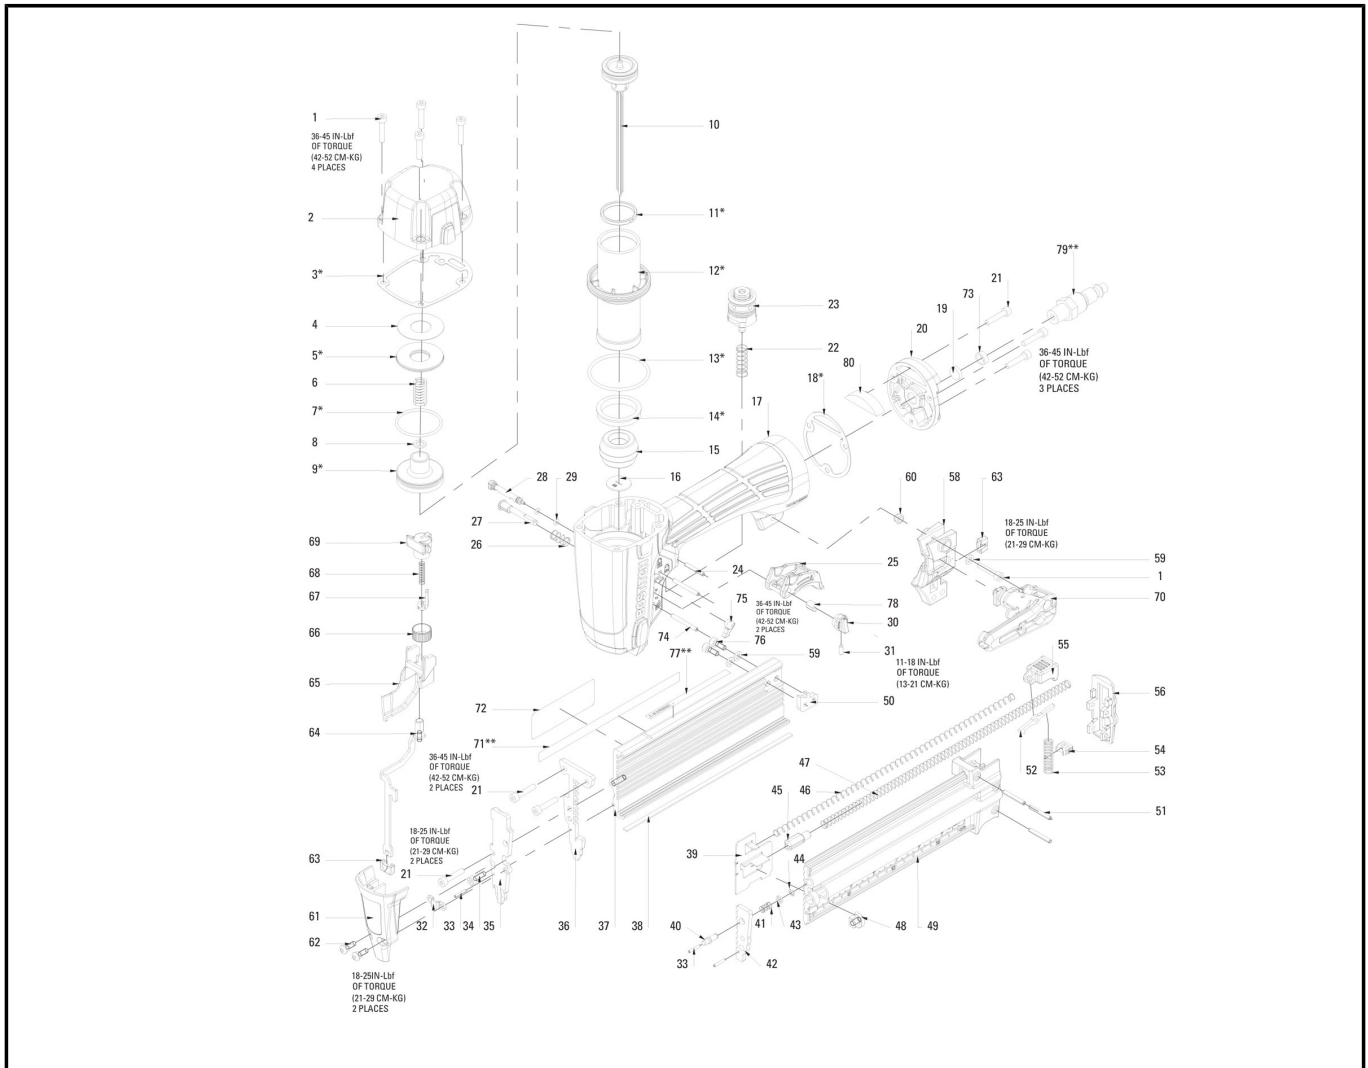


Chart Ref	Spare part code	Description	Status	Previous Part Code 1	Previous Part Code 2
1	100260	SCREW, SOC. HD. CAP M4 X 20	active		
2	181917	ASSEMBLY, CAP	active		
3	175682	GASKET, FRAME/CAP	active		
4	180445	PLATE, HEAD VALVE	active		
5	180446	SEAL, HEAD VALVE	active		
6	180447	SPRING, HEAD VALVE	active		
7	180448	O-RING, 33.5MMX2.0MM	active		
8	180449	WASHER, PLAIN, D6X10X1	active		
9	180450	BODY, HEAD VALVE	active		
10	180451	ASSEMBLY, PISTON/DRIVER	active		
11	180457	RING, PISTON	active		
12	180458	SLEEVE, CYLINDER	active		
13	180459	O-RING, 44.7MMX2.4MM	active		
14	180460	CHECK SEAL	active		
15	180461	BUMPER	active		
16	180462	DRIVER GUIDE	active		
17	175656	FRAME, OVERMOLD	active		
18	180463	GASKET, END CAP	active		
19	180578	AIR FILTER	active		
20	180465	END CAP	active		

Chart Ref	Spare part code	Description	Status	Previous Part Code 1	Previous Part Code 2
21	182237	SCREW, SHCS, M4X0.70X16	active		
22	180476	SPRING, TRIGGER	active		
23	TVA15	ASSEMBLY, TRIGGER VALVE	active		
24	180475	PIN, SPRING, M3X20 MM	active		
25	184513	ASSEMBLY, TRIGGER	active		
26	180481	SPRING, MODE SWITCH	active		
27	184507	PIN, MODE SWITCH	active		
28	184519	PIN, TRIGGER LOCK	active		
29	MRG002514	O-RING,.098 x .055	active		
30	184506	BUTTON, MODE SWITCH	active		
31	180484	SCREW, SET, M3X8 MM	active		
32	180207	BRACKET, TRIP	active		
33	180490	PIN, SPRING, M2X12MM	active		
34	MSC4070-12	SCREW, SHCS, M4X0.70X12	active		
35	180489	NOSE	active		
36	175661	CORE TIP, FIXED	active		
37	180488	MAGAZINE, FIXED	active		
38	180497	GUIDE, NAIL	active		
39	180498	PUSHER	active		
40	180491	PLUNGER, LOCK OUT	active		
41	180492	SPRING, LOCK OUT	active		
42	175662	PLATE, CORE	active		
43	180493	SPACER	active		
44	180494	E-RING, 2.5MM	active		
45	180499	ROLLER, PUSHER	active		
46	180496	PUSHER SPRING B	active		
47	180495	PUSHER SPRING A	active		
48	180238	SET NUT	active		
49	181915	MAGAZINE, SLIDING	active		
50	180500	REAR PLATE	active		
51	180503	PIN,SPRING M3X23MM	active		
52	180501	LATCH	active		
53	180502	SPRING, LATCH	active		
54	180319	SUPPORT, LATCH SPRING	active		
55	175666	COVER, LATCH	active		
56	175665	END CAP, MAGAZINE	active		
58	175664	BRACKET, MAGAZINE	active		
59	180504	WASHER, FLAT, D4X8X1	active		
60	MHE4070-100	ELASTIC STOP NUT,M4	active		
61	175663	COVER, NOSE	active		
62	180505	SHOULDER SCREW	active		
63	179760	FOOT, CONTACT (NO-MAR)	active		
64	180314	ASSEMBLY, TRIP	active		
65	180508	GUIDE, LOWER CONTACT ARM	active		
66	180509	ADJUSTING KNOB	active		
67	180510	ASSEMBLY, UPPER CONTACT ARM	active		
68	180513	SPRING, CONTACT ARM	active		
69	180514	GUIDE, UPPER TRIP	active		
70	182272	ASSEMBLY, BELT HOOK, EU	active		
72	182241	LABEL, BT1855-E	active		

Chart Ref	Spare part code	Description	Status	Previous Part Code 1	Previous Part Code 2
73	182234	PU-RING	active		
74	174345	PIN, SPRING, M3X28	active		
75	184518	BUTTON, TRIGGER LOCK	active		
76	MSC4070-10	SCREW,SHCS,M4X0.70X10	active		
78	184508	BUSHING, TRIGGER	active		
80	180577	MUFFLER	active		
option	BT55/SX38-RK	BT1855/SX1838 REBUILD KIT	active		
option	BT55/SX38-TIPS	BT1855/SX1838 NO MAR TIP PACK	active		