

Tool model
Tool Status

SX1838-E
active

BOSTITCH®

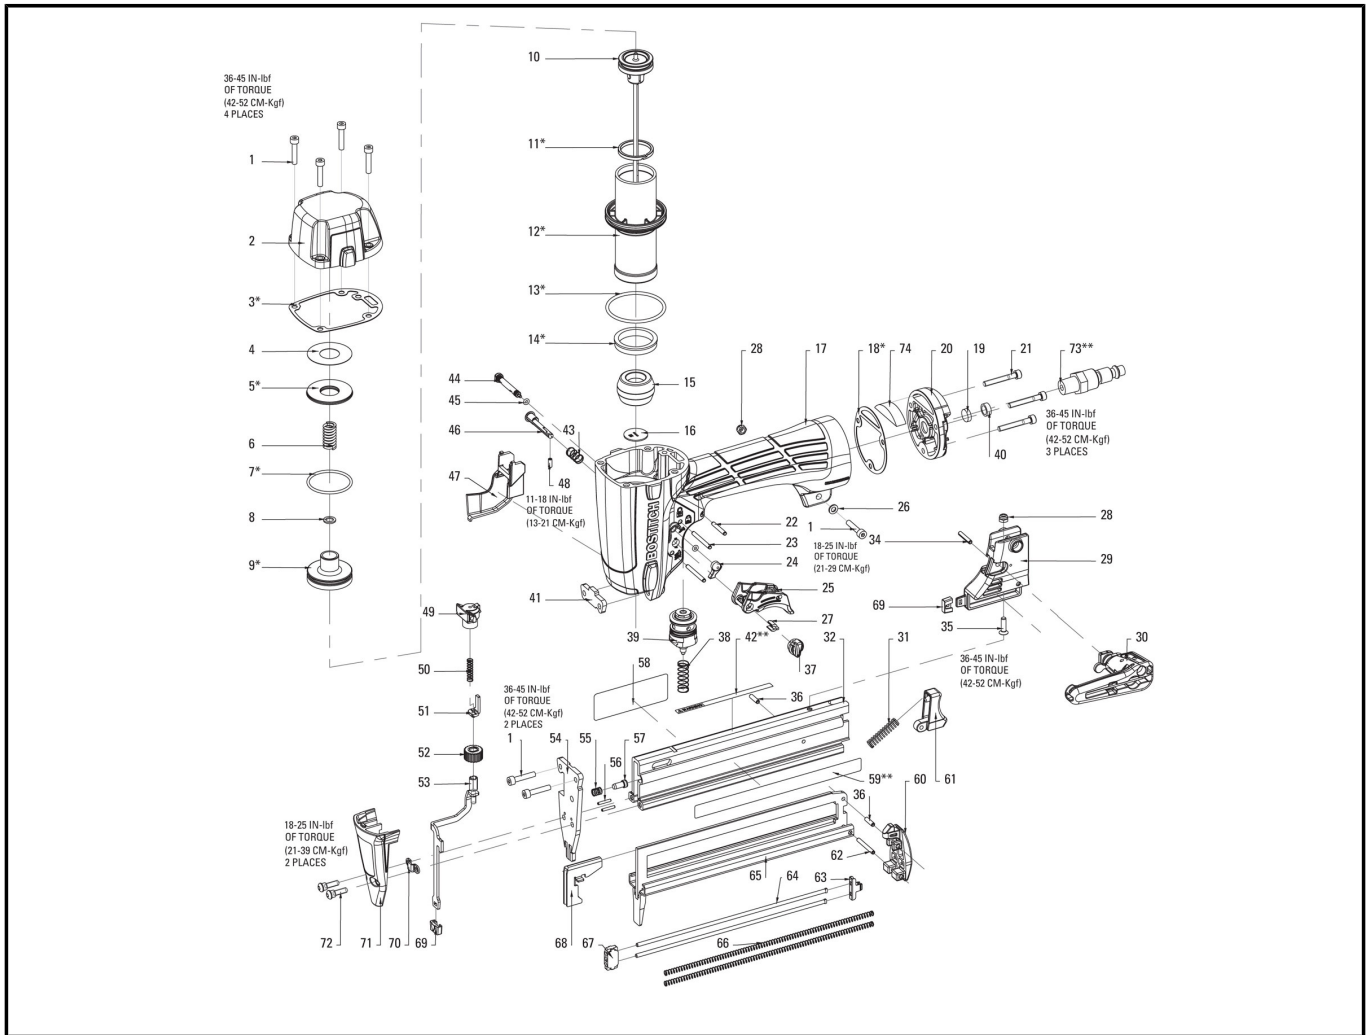


Chart Ref	Spare part code	Description	Status	Previous Part Code 1	Previous Part Code 2
1	100260	SCREW, SOC. HD. CAP M4 X 20	active		
2	181917	ASSEMBLY, CAP	active		
3	175682	GASKET, FRAME/CAP	active		
4	180445	PLATE, HEAD VALVE	active		
5	180446	SEAL, HEAD VALVE	active		
6	180447	SPRING, HEAD VALVE	active		
7	180448	O-RING, 33.5MMX2.0MM	active		
8	180449	WASHER, PLAIN, D6X10X1	active		
9	180450	BODY, HEAD VALVE	active		
10	180205	ASSEMBLY, PISTON/DRIVER	active		
11	180457	RING, PISTON	active		
12	180458	SLEEVE, CYLINDER	active		
13	180459	O-RING, 44.7MMX2.4MM	active		
14	180460	CHECK SEAL	active		
15	180461	BUMPER	active		
16	180462	DRIVER GUIDE	active		
17	175656	FRAME, OVERMOLD	active		
18	180463	GASKET, END CAP	active		
19	180578	AIR FILTER	active		
20	180465	END CAP	active		

Chart Ref	Spare part code	Description	Status	Previous Part Code 1	Previous Part Code 2
21	182237	SCREW, SHCS, M4X0.70X16	active		
22	180475	PIN, SPRING, M3X20 MM	active		
23	174345	PIN, SPRING, M3X28	active		
24	184518	BUTTON, TRIGGER LOCK	active		
25	184513	ASSEMBLY, TRIGGER	active		
26	180504	WASHER, FLAT, D4X8X1	active		
27	184508	BUSHING, TRIGGER	active		
28	MHE4070-100	ELASTIC STOP NUT,M4	active		
29	181914	BRACKET, MAGAZINE	active		
30	182272	ASSEMBLY, BELT HOOK, EU	active		
31	180528	SPRING, LATCH	active		
32	180192	MAGAZINE, FIXED, MACHINING	active		
34	107583	PIN,SPRING M3 x 18MM	active		
35	174307	SCREW,SFHCS,M4X0.7X14	active		
36	MPG030012	PIN,SPRING,M3X12MM	active		
37	184506	BUTTON, MODE SWITCH	active		
38	180476	SPRING, TRIGGER	active		
39	TVA15	ASSEMBLY, TRIGGER VALVE	active		
40	182234	PU-RING	active		
41	180208	PLATE , DRIVER	active		
43	180481	SPRING, MODE SWITCH	active		
44	184519	PIN, TRIGGER LOCK	active		
45	MRG002514	O-RING,.098 x .055	active		
46	184507	PIN, MODE SWITCH	active		
47	180530	GUIDE, LOWER CONTACT ARM	active		
48	180484	SCREW, SET, M3X8 MM	active		
49	180514	GUIDE, UPPER TRIP	active		
50	180513	SPRING, CONTACT ARM	active		
51	180510	ASSEMBLY, UPPER CONTACT ARM	active		
52	180509	ADJUSTING KNOB	active		
53	180318	ASSEMBLY, TRIP	active		
54	180190	NOSE	active		
55	180521	SPRING, LOCK OUT	active		
56	180490	PIN, SPRING, M2X12MM	active		
57	180522	PLUNGER, LOCK OUT	active		
58	182242	LABEL, SX1838-E	active		
60	180201	END CAP, MAGAZINE	active		
61	180529	LATCH	active		
62	180567	PIN, SPRING, M3X25	active		
63	180200	SUPPORT, SLIDING GUIDE	active		
64	180526	ROD, SPRING GUIDE	active		
65	180206	ASSEMBLY, MAGAZINE CORE	active		
66	180527	SPRING, PUSHER	active		
67	180199	GUIDE, SLIDING	active		
68	180198	PUSHER	active		
69	179760	FOOT, CONTACT (NO-MAR)	active		
70	180207	BRACKET, TRIP	active		
71	180194	COVER, NOSE	active		
72	180587	SHOULDER SCREW, M4.0X12MM	active		
74	180577	MUFFLER	active		

Chart Ref	Spare part code	Description	Status	Previous Part Code 1	Previous Part Code 2
option	BT55/SX38-RK	BT1855/SX1838 REBUILD KIT	active		
option	BT55/SX38-TIPS	BT1855/SX1838 NO MAR TIP PACK	active		